



# KG130 USER GUIDE


Please read this manual carefully before operating your mobile phone. Retain it for future reference.

# *C* € 0168



- Disposal of your old appliance

  1. When this crossed-out when 1. When this crossed-out wheeled bin symbol is attached to European Directive 2002/96/EC.
  - 2. All electrical and electronic products should be disposed of separately. 3. Disposing of your old appliance correctly is better for the environment and personal health.
  - 4. For more information about disposal of your old appliance, please contact your local council, waste disposal service or the shop where you purchased the





# Turning Your Phone On and Off

- 1. Hold down the [END] key until the phone switches on.
- 2. To switch the phone off, hold down the [END] key until the power-off image displays.

# Making a Call

- 1. Enter a phone number including the area code.
- 2. Press the [SEND] key to call the number.
- 3. When finished, press the <a>[END]</a> key.

# Making an international call

- 1. Press and hold the we key for the international prefix. The '+' character automatically selects the international access code
- **2.** Enter the country code, area code, and the phone number.
- **3.** Press [send] key to call the number

## Making a call from the phonebook

You can save the names and phone numbers dialled regularly in the SIM card and/or phone memory. You can dial a number by simply looking up the desired name in the contacts and pressing the key. For shortcut of the phonebook, you can press in standby mode.

# How to set the tone

## Ringtone

- 1. Press the OK key and select [Profiles] using the up/down navigation keys.
- 2. Choose a profile and then select [Personalise] and choose the Ring tones menu.
- **3.** Press the left soft key Select and then you can set the desired ringtone.

> If you want to change your ringer to vibrate, select Vibrate only mode or press and hold the

## Ring/Keypad/Message/Call alert tones and volumes

You can select Ring/Keypad/Message/Call alert tones and volumes. You can change the sound that will occur when a key is pressed, or the volume level. [Menu - Profiles - Personalise]

# Installing the SIM Card and Charging the Battery

#### Installing the SIM Card

When you subscribe to a mobile network, you 1 2 Open battery cover are provided with a plug-in SIM card loaded with your subscription details, such as your PIN, any optional services available and many

#### Important!

▶ The plug-in SIM card and its contacts can be easily damaged by scratches or bending, so be careful when handling, inserting or removing the card. Keep all SIM cards out of the reach of small children.



Fully charge the battery before using it for the first time.

Illustrations

Insert vour SIM

Close the battery cover

Charge your battery

3


5

# Answering a Call

- 1. When the phone rings and the phone icon flashes on the screen, press the [SEND] key or the left soft key to answer.
- 2. End the call by pressing the [END] key.

After the call ends, the phone will go back to standby mode.


### Phone Components

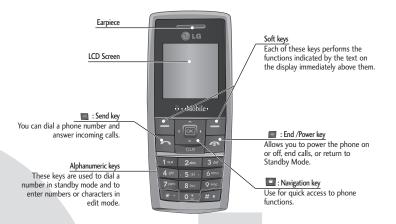


### Selecting functions and options

Your phone offers a set of functions that allow you to customise it. These functions are arranged in menus and sub-menus, accessed via the left and right soft keys.

The label on the bottom of the display screen immediately above the soft keys indicates their current function.

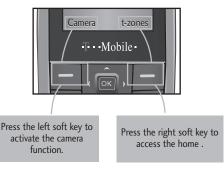

### **Display Information**



#### On-Screen Icons

The table below describes various display indicators or icons that appear on the phone's display screen.

Y.ad	Tells you the strength of the network signal.		
©II	You can use GPRS service.		
B	Shows that you are using a roaming service.		
2	Line 1/2 is in use for outgoing calls.		
œ	The alarm has been set and is on.		
<b>@</b>	Tells you the status of the battery.		
$\boxtimes$	You have received a text message.		
مه	You have received a voice mail.		
ξŵ	You have received a push message.		
	You can view your schedule.		
:d:	Vibrate only menu in profile.		
J9	General menu in profile.		
35	Outdoor menu in profile.		
75	Silent menu in profile.		
Ω	Headset menu in profile.		
₽	All calls divert has been set.		

# **Entering Text**

You can enter alphanumeric characters by using the phone's keypad. For example, storing names in the phonebook, writing a message, creating a personal greeting.

### T9 Mode

This mode lets you enter words with only one keystroke per letter. Each key on the keypad has more than one letter. The T9 mode automatically compares your keystrokes with an internal dictionary to determine the correct word, thus requiring far fewer keystrokes than the traditional ABC mode.

#### **ABC Mode**

This mode lets you enter letters by pressing the key labeled with the required letter once, twice, three or four times until the letter is displayed.

### 123 Mode (Numbers Mode)

Type numbers using one keystroke per number.

#### **Symbol Mode**

This mode allows you to enter special characters by pressing the key.

#### Menu tree

▶ The menu in this phone can be displayed in 2 ways. One is by grid type or secondly in list format. Please note that menu number options are different in each view. The default setting on the phone is set to show the menu in grid type, so therefore all the menu number selections throughout the manual are set according to that setting

4.2 Voice recorder

5.1 New message

5.6 Listen voicemail

5.7 Info message

5.8 Templates

5.9 settings

6.1 Images 6.2 Sounds

6.3 Others

6. My files

4. Multimedia

5. Messaging

5.2 Inbox 5.3 Drafts

5.5 Sent

5.4 Outbox

4.1 Camera

1.1 Home 1.2 Bookmarks 1.3 Go to URL 1.4 History 1.5 Sawed pages 1.6 Settings 1.7 Information			
2. Calls 2.1 All calls			
2.2 Missed calls			
2.3 Dialled calls			
2.4 Received calls			
2.5 Call duration			
2.6 Call costs			
2.7 Data information			
3. Tools			
3.1 Alarm clock			
3.2 Calendar			
3.3 Calculator			

3.5 Stopwatch

3.6 Unit converter 3.7 World clock

# 7. Settings 7.1 Date & Time

7.2 Languages 7.3 Display 7.4 Network 75 Call 7.6 Security 7.7 Flight mode 7.8 Power save 7.9 Reset 7.0 Memory status

# 8. Contacts

8.1 Search 8.2 New contact 8.3 Speed dials 8.4 Groups 8.5 Copy all 8.6 Delete all 8.7 Settings 8.8 Information

### 9. Profiles

## Quick feature reference

This section provides brief explanations of features on your phone.

# t-zones Menu 1

t-zones provide information such as news, weather forecast, information on sports or traffic whenever you need it. In addition, t-zones provides superior multimedia services such as the latest music or ring tones, wallpapers or games for you to download.

You can check the record of missed, received, and dialled calls only if the network supports Caller Line Identification (CLI) within the service area. The number and name/photo (if available) are displayed together with the date and time at which the call was made. You can also view call durations

#### **Tools** Menu 3

Calculator

Memo

Alarm clock You can set up to 5 alarm clocks to go off at a specified time. Calendar When you enter this menu, a calendar appears.

> The calculator provides the basic arithmetic functions: addition, subtraction, multiplication and division

> > You can register your own memos here.

This option allows you to use the function of a stopwatch. Stopwatch

# Tools Menu 3 (Continued)

Unit converter This converts any measurement into a unit you want.

major cities around the world, using the left/right navigation keys. SIM Service

Your service provider can offer special applications through the SIM card.

Multimedia Menu 4

World clock

This application enables you to take a still picture. You can take a picture in your desired size, and use it for the contacts photo, home screen and other more general purposes. Once taken, a still image can be sent via a Multimedia message or Email.

You can check the current time of Greenwich Mean Time (GMT) and

Press the left soft key [Camera] and the screen will now become the viewfinder

> Focus on the subject to capture the image, and then press the 🔳 key.

If you want to save it, press the left soft key [Options] and select

# Voice recorder

You can record a voice memo in the Voice recorder menu

Messaging Menu 5		My files Menu 6		
This menu includes functions related to SMS (Short Message Services) and MMS (Multimedia Message Service).		You can set the following menus for your convenience and preferences.		
		Images	Shows the list of image files.	
New message	Create and send a text or multimedia message to one or more recipients.	Sounds	Shows the list of sound files.	
Inbox	You will be alerted when you have received a message.	Others	Any type of file can be stored here. This folder is mainly used for transporting files from one PC to another.	
Drafts	This menu shows the preset message list.	Games	In this menu, you can manage the Java applications installed in your phone.	
Outbox	This menu allows to view the message which is about to be sent or has failed to be sent.			
Sent	This menu allows you to view the messages which have already been sent, including time and content.	Settings Menu 7		
Listen voicemail	This menu provides you with a quick way of accessing your voice mailbox (if provided by your network).	Date & Time	You can set functions relating to the date and time.	
		Languages	You can change the language for the display texts in your phone.	
Info message	Info service messages are text messages delivered by the network to your handset.	Display	You can change the settings for the phone display.	
Templates	There are pre-defined messages in the list. You can view and edit the	Network	You can select a network which will be registered as Automatic, Manual or Preferred. Usually, the network selection is set to Automatic.	

# Profiles Menu 9

Settings

In Profiles, you can adjust and customise the phone tones for different events, environments, or caller groups.

template messages or create new messages.

This menu allows you to set features of your network service provider.

# ☐ Guidelines for safe and efficient use (Continued)

#### In aircraft

Wireless devices can cause interference in aircraft.

> Turn off your mobile phone before boarding any aircraft.

Keep the phone in a safe place out of children's reach. It includes small parts which if detached may cause a choking hazard.

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

# ☐ Guidelines for safe and efficient use

Settings menu.

Please read these simple guidelines. Ignoring them may be dangerous or illegal. Further detailed information is given in this manual

your SIM card when the phone is switched on.

You can set the menu relevant to a call by pressing [OK] in the

This menu allows you to protect your phone from unauthorised use.

PIN code request: You can set the phone to ask for the PIN code of

#### Warning

Call

Security

- For your safety, use ONLY specified ORIGINAL batteries and chargers.
- > Switch off the phone in any area where required by special regulations, e.g. in a hospital where it may affect medical equipment.
- > Batteries should be disposed of in accordance with relevant legislation.

### Product care and maintenance

WARNING! Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- The unit should be kept away from heat sources such as radiators or cookers.
- Use a dry cloth to clean the exterior of the unit. (Do not use any solvents.)
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.

# ☐ Guidelines for safe and efficient use (Continued)

#### Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- Do not disassemble or short-circuit the battery pack.
- Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times before it needs to be replaced.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as the
- Risk of explosion if battery is replaced by an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions.

#### Settings Menu 7 (Continued)

- Auto key lock: This menu allows to set the time of Auto key lock.
- > Phone lock: You can use a security code to avoid unauthorised use of
- Call barring: The Call barring service prevents your phone from making or receiving a certain category of calls. This function requires the call barring password.
- > Fixed dial number (SIM dependent): You can restrict your outgoing calls to selected phone numbers. The numbers are protected by your PIN2 code. The numbers you wish to allow access to once this service has been enabled, must be added to the contacts after enabling Fixed
- Change codes: PIN is an abbreviation of Personal Identification Number to prevent use by unatuhorised persons. You can change the access codes: Security code, PIN code, PIN2 code.
- If set to On, the connection between the phone and network service will Flight mode
- This function saves battery power by keeping the backlight brightness Power save
- You can initialise all factory defaults. You will need the Security code to Reset activate this function
- You can check the capacity of free memory. Memory status

# ☐ Guidelines for safe and efficient use (Continued)

Always replace a blown fuse with a fuse of the same type and size. Never use a fuse of a higher

### Efficient phone operation

To enjoy optimum performance with minimum power consumption please:

Hold the phone as you would any other telephone.

#### **Electronic devices**

# All mobile phones may get interference, which could affect performance.

Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over a pacemaker, i.e. in your breast pocket.

# ☐ Guidelines for safe and efficient use (Continued)

You can Search for contacts in Phonebook.

You can set the Contact display option.

You can add phonebook entries by using this menu.

Assign contacts to any of the keys between and

you want to search.

vour service provider.

card.

Note: Instant searching is available by inputting the initial letter of the name

You can add members to each group, with up to a maximum of 7 groups

You can copy all entries from the SIM card memory to Phone memory.

You can delete all entries from the SIM card memory or Phone memory.

> Service dial numbers: Access the list of service numbers assigned by

Own numbers: You can save and check your own numbers in the SIM

Business card: This option allows you to create your own business

card featuring your name, mobile phone number and so on.

### Road safety

Contacts Menu 8

Search

New contact

Speed dials

Groups

Copy all

Delete all

Settings

Information

Check the laws and regulations on the use of mobile phones in the areas when you

- Do not use a hand-held phone while driving.
- Use a hands-free kit, if available,
- > Pull off the road and park before making or answering a call if driving conditions so require.

### Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

#### Potentially explosive atmospheres

Do not use the phone at a refueling point. Do not use near fuel or chemicals.

# ☐ Guidelines for safe and efficient use (Continued)

# Exposure to radio frequency energy

### Radio wave exposure and Specific Absorption Rate (SAR) information

This mobile phone model KG130 has been designed to comply with applicable safety requirement for exposure to radio waves. This requirement is based on scientific guidelines that include safety margins designed to ensure safety of all persons, regardless of age and

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- > While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2W/kg averaged over ten (10) gram of tissue.
- The highest SAR value for this model phone tested by DASY4 for use at the ear is 0.514 W/kg (10g) and when worn on the body is 0.426 W/kg (10g).
- > SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE) is 1.6 W/kg averaged over one (1) gram of tissue.

